CORNING

Centrix™ System
Accessories Installation

P/N 003-961
Issue 4

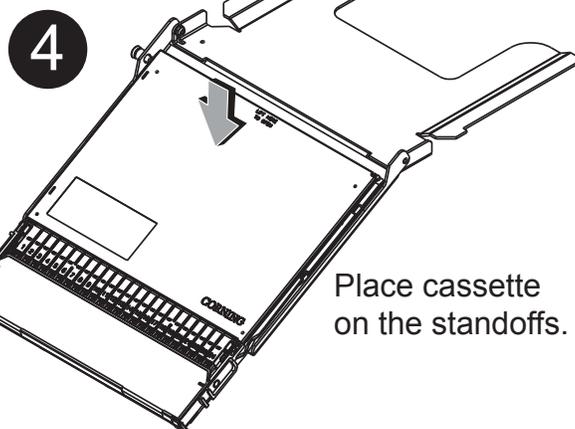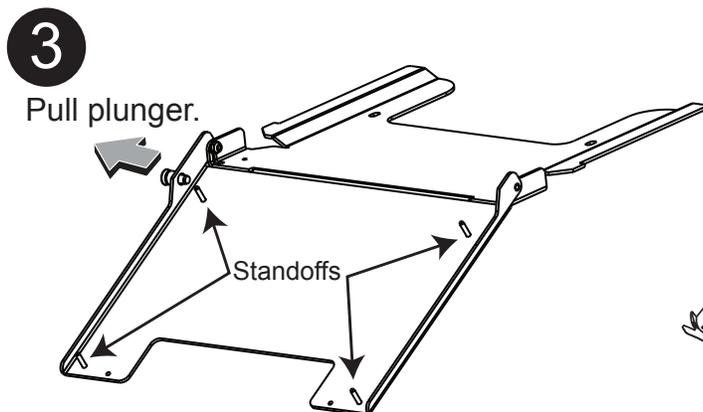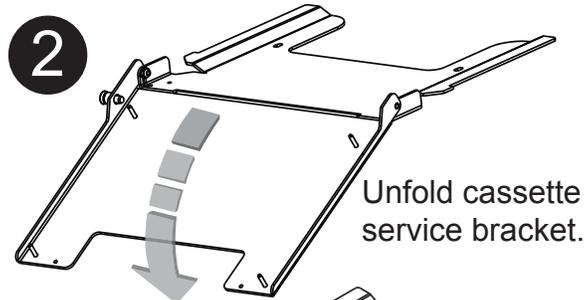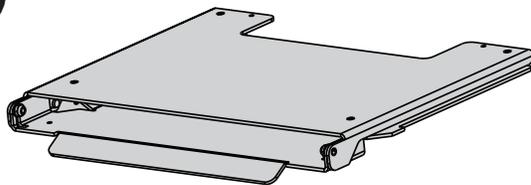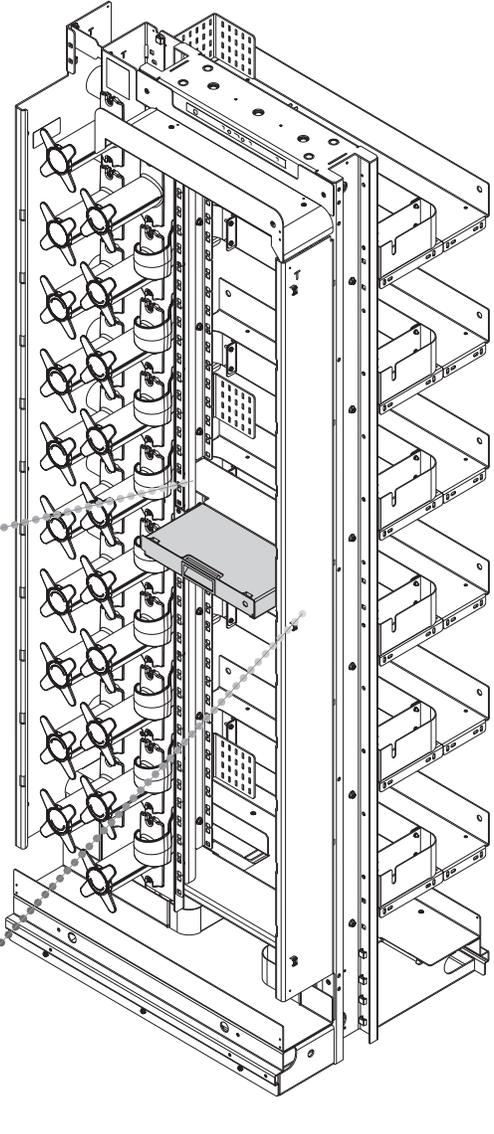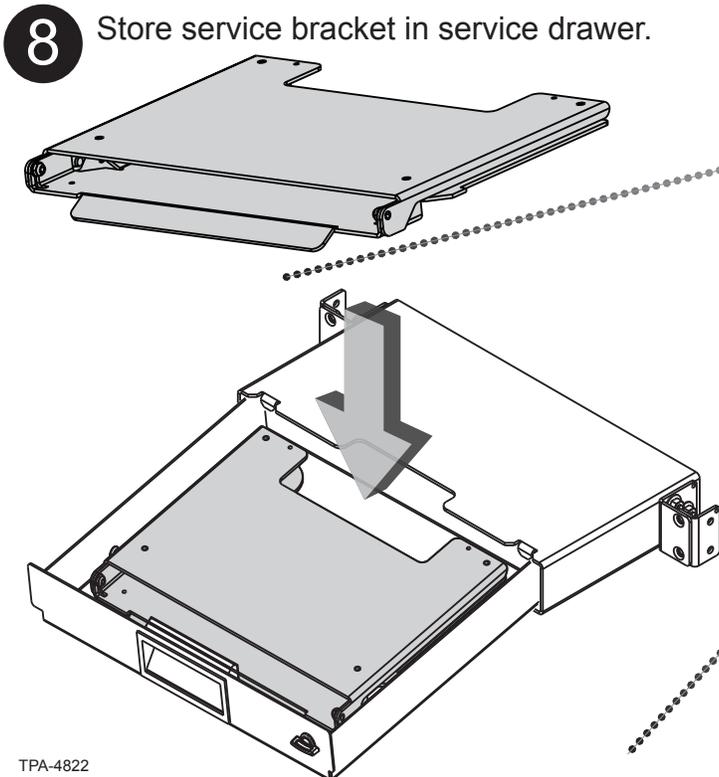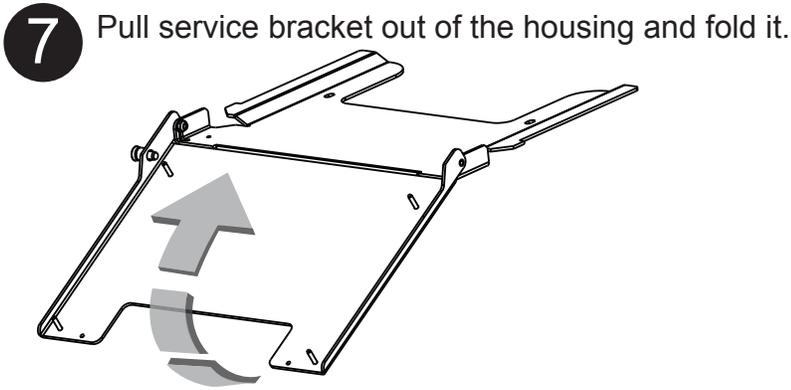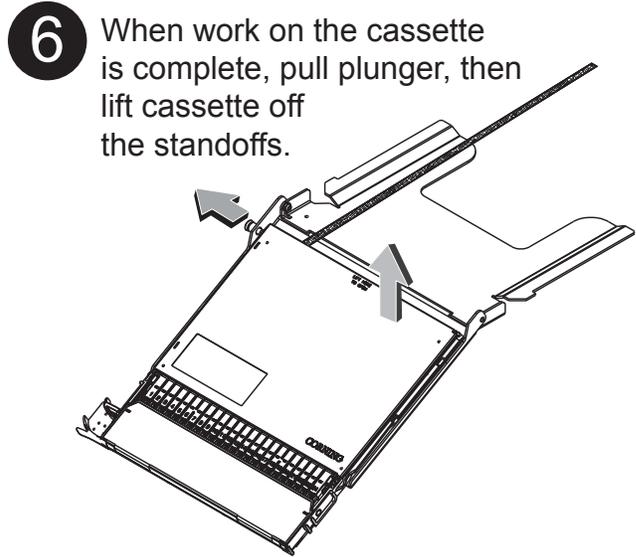| related literature |	
003-948	Centrix System Housing Installation
003-949	Centrix System Pigtailed Housing with Pigtailed Cassette Installation
003-950	Centrix System Frame Installation
003-951	Centrix System Stubbed Housing Installation
003-959	Centrix System Pigtailed Cassette installation with WDMs and PON Devices
003-960	Centrix System Jumper Routing Guidelines
003-1029-AEN	Centrix System Frame with Right-Side Jumper Routing Access

1. Tools and Materials Required

- Phillips screwdriver

2. Centrix System Cassette Service Bracket

1 Cassette service bracket closed

2 Unfold cassette service bracket.

3 Pull plunger.

Standoffs

TPA-4821

4 Place cassette on the standoffs.

5 Insert cassette service bracket into slot where cassette will be installed.

6 When work on the cassette is complete, pull plunger, then lift cassette off the standoffs.

7 Pull service bracket out of the housing and fold it.
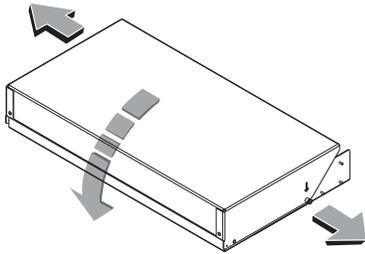
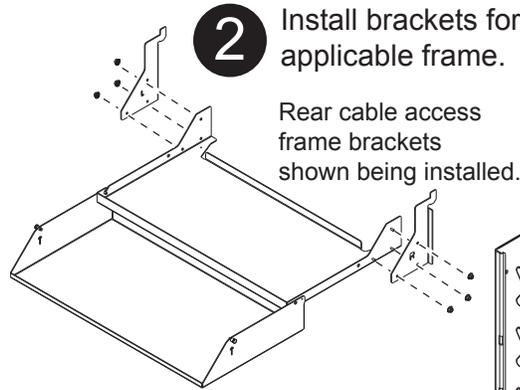**8** Store service bracket in service drawer.

TPA-4822
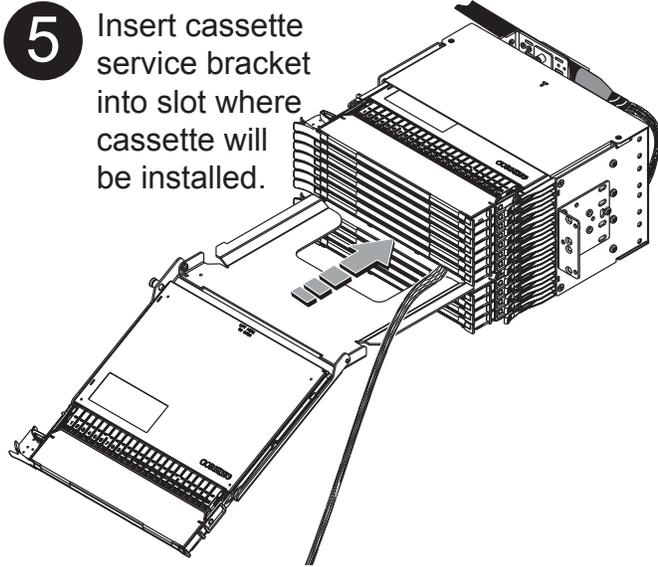
3.   Centrix™ System Work Shelf — Rear Cable Access Frame
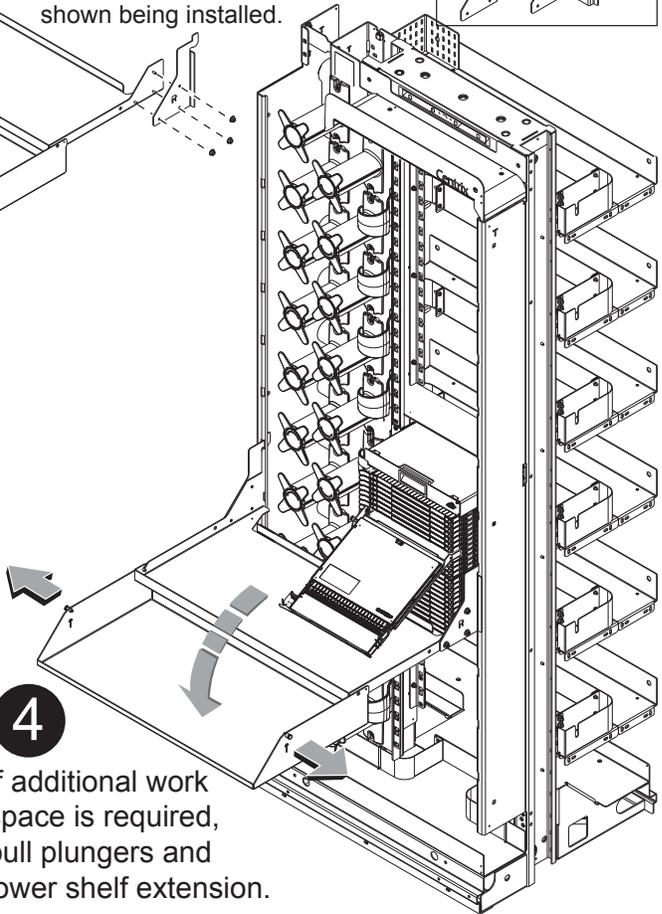
1 Pull plungers and lower shelf extension.

2 Install brackets for applicable frame.

Rear cable access frame brackets shown being installed.

Front cable access frame brackets
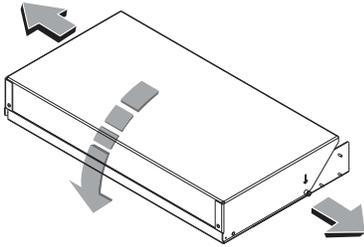
3 Close shelf and hang it on the frame.
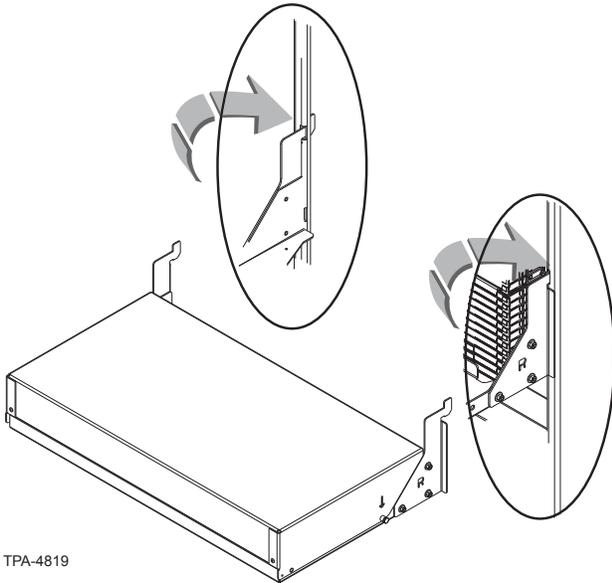
TPA-4819

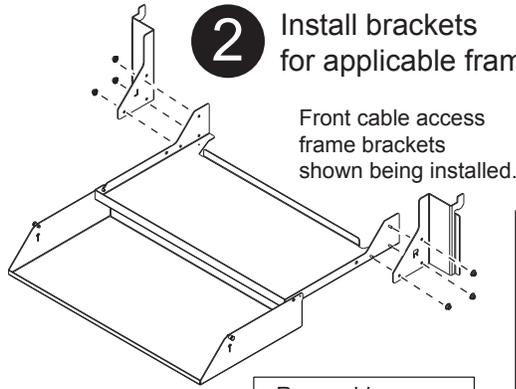**4** If additional work space is required, pull plungers and lower shelf extension.

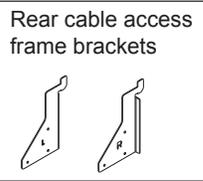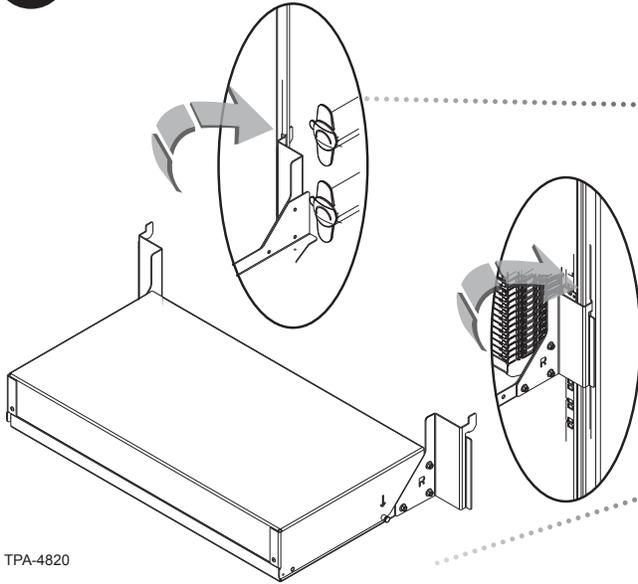## 4. Centrix™ System Work Shelf — Front Cable Access Frame

1 Pull plungers and lower shelf extension.

2 Install brackets for applicable frame.

Front cable access frame brackets shown being installed.

Rear cable access frame brackets

3 Close shelf and hang it on the frame.

TPA-4820

4 If additional work space is required, pull plungers and lower shelf extension.
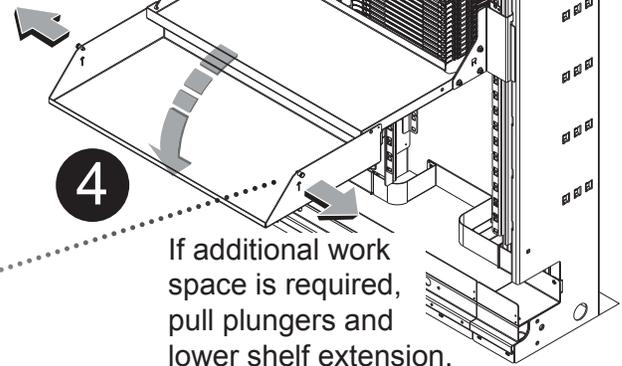
5.   Centrix™ System Rear Trough End Cap Kit

Trough kit can be used on right and left side of the rear Centrix System troughs.

X 6

TPA-6026